

# **Installation Manual**

## **Premier 8XE**


INS784

***Texecom***

# Content

- 1.0 Expander Layout ..... 3**
- 2.0 Connecting Expanders ..... 3**

# 1.0 Expander Layout

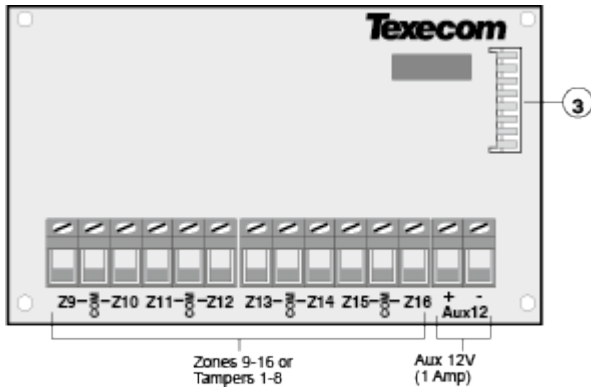

The 8XE Zone Expander has:

- 8 fully programmable zones
- Aux 12V Output

# 2.0 Connecting Expanders

The 8XE local zone expander plugs directly on to the terminals located on the right hand side of the control panel (see below for details). To install the local zone expander proceed as follows:

1. Ensure that all power is removed from the control panel (mains and battery) before attempting to fit the expander.
2. Push the four support pillars (supplied) into the four locating holes on the control panel PCB.
3. Align the local expander connector with the 8 way plug (JP5) on the control panel. Push expander into place, ensuring that all four pillars clip into the four locating holes on the local expander.

